



To Remove the Tonneau Cover



1. Hold the tonneau in the open position and remove the female strut end from the male ball stud end on the tonneau bracket. Repeat on the other side.



2. Close the tonneau back down, remove clips from both sides.



3. Using two people, lift the tonneau cover off of the male hinge.



4. Place the tonneau on a flat surface while not on the truck.



To Remove the Toolbox & Toolbox Frame



1. Remove the 1/4" bolts from the male bracket and remove the bracket.



2. Remove 3/8" bolts from the tonneau side of the toolbox frame



3. Remove clamp from the tonneau side of the toolbox frame



4. Slightly elevate the toolbox frame and slide the toolbox out.



5. Remove the 3/8" bolts from the cab end of the toolbox frame



6. Using two people lift the toolbox frame off of the pickup bed.